

Fob Registration Instructions

for AP-WRC3 and AP-WRC3iF

Before being able to use a new fob it must first be registered with the AP-WRC3 or AP-WRC3iF. Fob registration is a simple process and only takes a few minutes to do.

Equipment needed:

- 2 x CR2016 lithium batteries for <u>each</u> fob
- Tool to remove cover from AP-WRC3/AP-WRC3iF
- (optional) small flat blade screwdriver
- 1. Fobs are shipped without batteries, so first install two batteries in the new fob.
- 2. Remove the 4 x screws from the back of the AP-WRC3/AP-WRC3iF and locate the white button on the small receiver circuit board which is standing up from the main circuit board (see Figure 1 for button location). The pushbutton faces the wall of the case and is near the end of the circuit board nearest to the side of the case which has the cable and switch.

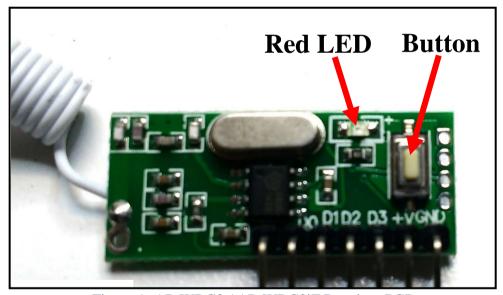


Figure 1. AP-WRC3 / AP-WRC3iF Receiver PCB

- 3. Press the button (you may need the small flat blade screwdriver or similar to push the button in) and look for the red LED to turn on (see Figure 1 for LED location).
- 4. Once the red LED is on, press any button on the new fob and watch to see that the red LED flashes and turns off.
- 5. The fob is now programmed to the AP-WRC3/AP-WRC3iF, so check that all the buttons work by pressing each one and looking for the blue light of the AP-WRC3/AP-WRC3iF to flash in response.
- 6. Repeat steps 3 to 5 for the second fob.
- 7. Once finished registering all fobs, put the cover back on the AP-WRC3/AP-WRC3iF and tighten all 4 screws.